





Installation Instructions for Metal Posts Stair Runs, Non-Tensioning

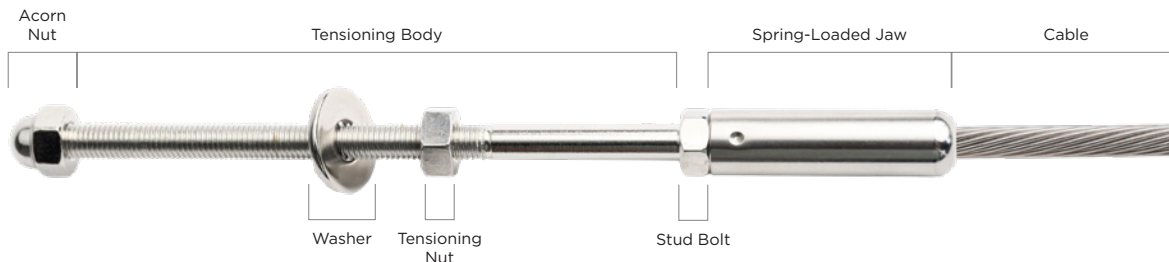

Fitting comes preassembled.

A. Post Preparation

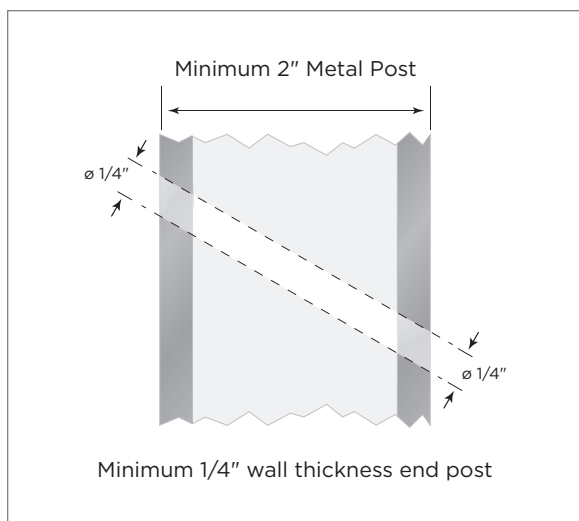

- A1. Using one face of the post, determine the center line of the post that runs from top to bottom.
- A2. Mark the placement of the holes to be drilled along the center line of post. Drill holes should be spaced a maximum of 3" apart from one another starting 3" from the underside of the handrail.
- A3. **End post:** to prepare an end post to accept the Non-Tensioner, drill holes with a 1/4" drill bit.

Intermediate post: to prepare an intermediate post to accept 1/8" cable, drill holes with a 5/32" drill bit.

NOTE: The maximum hole spacing must be 3" apart to meet Building Code requirements.


B. Fastening the Tensioning Body

IMPORTANT INSTALLATION NOTE

STAIR APPLICATIONS

The Tensioning fitting must be installed on each end post. Only one fitting will function as a tensioner. Install the non-tensioner end first.

- Refer to CR1606 and CR1706 and CR1606 and CR1706 stair instructions, tensioning for metal posts

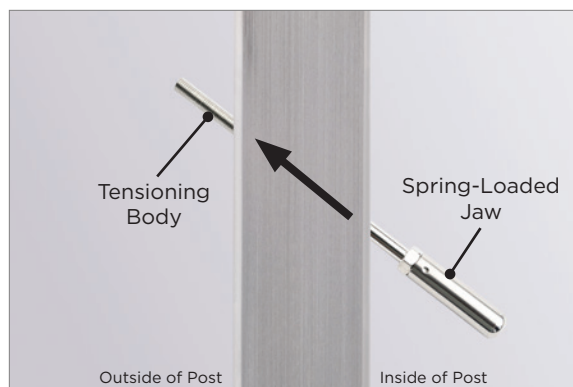


- B1. Holding the Spring-Loaded Jaw, feed the Tensioning Body through the inside to the outside of the post. Part of the Tensioning Body may extend beyond the post depending on your post size.



- B2. From outside of post slide on the Beveled Washer followed by the Washer. Screw tensioning nut onto the Tensioning Body in a clockwise direction. Use an 11mm wrench to fully tighten the Tensioning Nut.

C. Fastening the Cable

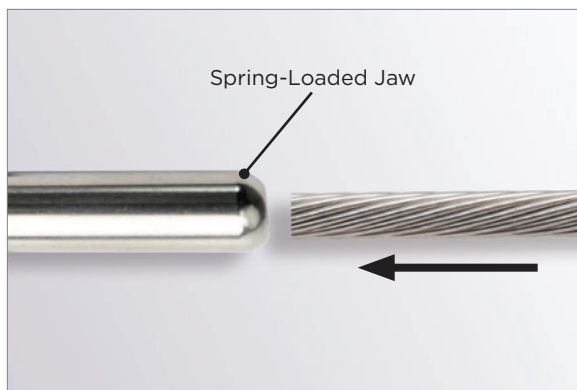

- C1. Insert the cable into the Spring-Loaded Jaw.

D. Completing the Installation



- D1. The Tensioning Body can be cut to a minimum length of 1/8\"



- D2. Complete the installation by threading the Acorn Nut in a clockwise direction onto the Tensioning Body. The Acorn Nut should sit flush against the Tensioning Nut to lock the device in place.

Limited Warranty

Bezdan warrants to the original property owner/purchaser that Bezdan stainless steel cable and fittings are free of defect for a period of ten (10) years from the date of receipt. This warranty covers defects in workmanship and materials under normal use, conditions, installation and maintenance in accordance with the product specifications and procedures described in the cable rail installation and maintenance instructions. Learn more at geobezdan.com/bezdan-cable.