

Installation Instructions for 2" Metal Posts on Level Runs

using 232 Series Kit



NOTE: Parts must be kept clean and free of debris before installation for best results.

A. DRILL POSTS

Hole sizes through **intermediate posts** and/or cable braces are:

- 5/32" for 1/8" cable
- 7/32" for 3/16" cable

End posts are drilled through, using a 29/64" drill bit for both the Receiver and Pull-Lock® fitting.

All holes should be burr-free.

Tools Required for Installation

- 5/32" Drill Bit
- 1/4" Drill Bit
- 29/64" Drill Bit
- 1/8" Hex Wrench
- 3/16" Hex Wrench
- 3" Combo Wrench
- RFXPL-KEY
- Cut Off Kit (mandrel)
- Cut Off Kit (wheel)

Cut-off Tool


Used to cut cable flush with the end of the Pull-Lock® fittings, and to cut excess threads off stud-type Receivers. Includes mandrel and two cut-off wheels.

Order **RFX-CUT-OFF KIT**




B. INSTALL TENSIONING TERMINAL

1. Slip the Delrin® washer over the body of the Receiver and insert the Receiver into the post.
2. Start the swaging stud attached to the cable into the Receiver and turn 2 complete turns. This will thread about 1/3 of the stud into the Receiver.

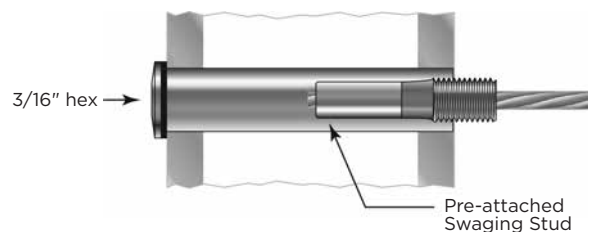

C. FEED CABLE THROUGH INTERMEDIATE POSTS

1. Feed the bare end of the cable through all intermediate posts and through the end post where you will be installing the Pull-Lock® fitting.

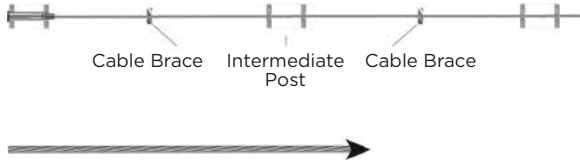


Feed bare end of cable through all other posts.

D. FEED/CRIMP CABLE THROUGH CORNER POSTS


There is not enough take-up in the short Receivers used in this kit to properly tension the cable if used around corners. This kit is only recommended for use on straight runs.

E. INSTALL SWAGELESS TERMINAL

1. Slip the Delrin® washer over the body of the Pull-Lock® fitting.

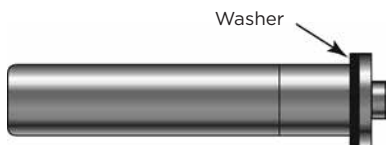

2. Rotate the Pull-Lock® fitting clockwise as you push it onto the cable. If the cable begins to “unravel,” you are rotating the fitting in the wrong direction.

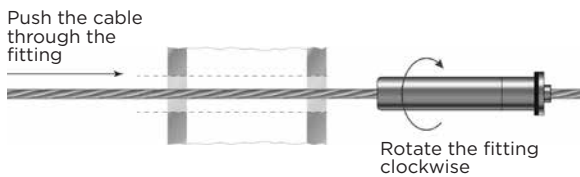


Note: If you have trouble inserting the cable into the fitting, it may be because the locking wedges have become stuck. This is not a defect!

Here's what you can do to “free the wedges”


For Pull-Lock® or Push-Lock® fittings for 1/8” cable, using either a RFXPL-KEY or 1/4” diameter bolt, insert the RFXPL-KEY or bolt into the hole and press until the wedges move freely. Perform the same operation for a 3/16” Pull-Lock® or Push-Lock®, except use a 16d nail or another tool with 1/8” or smaller diameter. Anything larger than what is recommended can actually get stuck inside the fitting - NOT what you want!

3. Push the Pull-Lock® fitting along the cable and firmly into the hole in your post. While holding the Pull-Lock® fitting against the end post, pull the bare end of the cable to remove as much slack in the cable as possible.

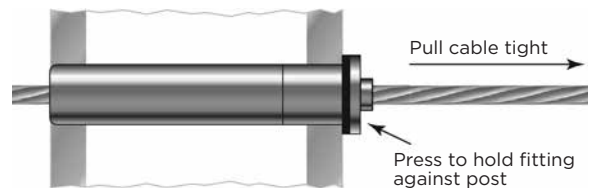

F. TENSION CABLES


1. Go to the other end and tension the cable by holding the cable securely to prevent it from turning while you turn the Receiver with a hex wrench. Be careful to protect the cable from damage while tensioning.

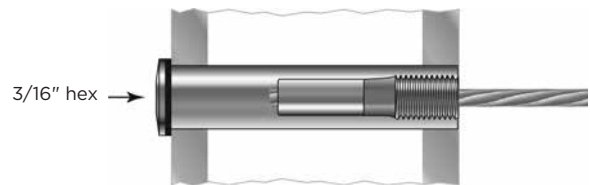

The swaging stud will be pulled into the Receiver by rotating the Receiver clockwise.




2. Tension all cables in sequence, beginning with the center cables, moving up and down toward the top and bottom. As you tension each cable, give it a sharp pull downward mid-span to help set the wedges, then re-tension as necessary in the same sequence. Be aware that the cable may move as much as 3/16" toward the tensioning terminal as the wedges seat.

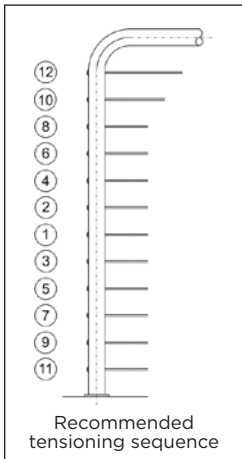


G. TRIM EXCESS CABLE

1. Return to the swageless terminal. Cut the cable flush with the hole in the back of the fitting using a cut-off wheel.

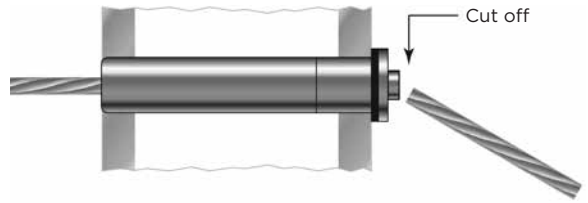

2. Twist the cap onto the lip of the Pull-Lock® fitting.

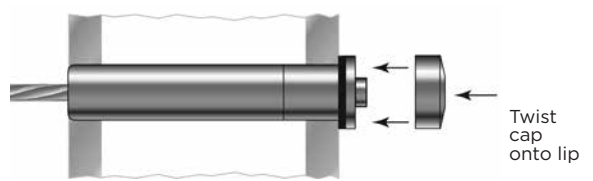

Installation Instructions for 2" Metal Posts on for Stairs using 232 Series Kit



NOTE: Parts must be kept clean and free of debris before installation for best results.

Tools Required for Installation

- 5/32" Drill Bit
- 1/4" Drill Bit
- 29/64" Drill Bit
- 1/8" Hex Wrench
- 3/16" Hex Wrench
- 3" Combo Wrench
- RFXPL-KEY
- Cut Off Kit (mandrel)
- Cut Off Kit (wheel)
- Hammer
- Small Block of Wood

Cut-off Tool

Used to cut cable flush with the end of the Pull-Lock® fittings, and to cut excess threads off stud-type Receivers. Includes mandrel and two cut-off wheels.


Order **RFX-CUT-OFF KIT**



A. DRILL POSTS


Hole size into end posts

Drill through both sides of both end posts.

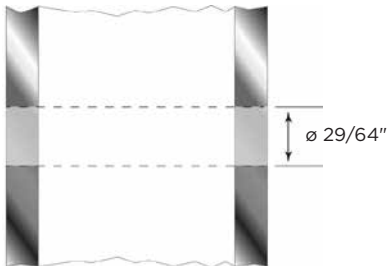


Intermediate posts are drilled on the angle.

Hole size for ø 1/8" dia. cable installation.

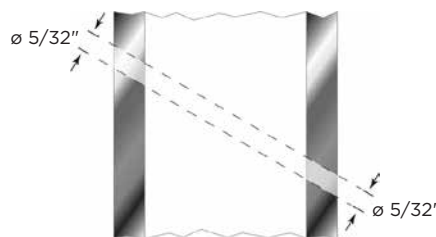

Hole size for ø 3/16" dia. cable installation.

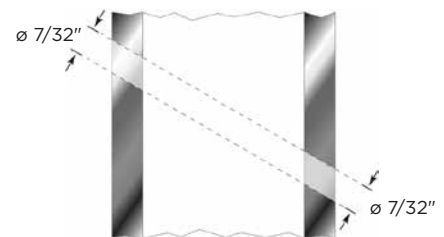


All holes should be burr-free.



BEZDAN RAILING SOLUTIONS
 Head Office: 4050 Graveley Street, Burnaby, BC V5C 4A5 Canada
 Phone: 1 800 663 6356 Fax: 604 299 5464 Email: info@geobezdan.com
www.bezdancable.com

B. INSTALL TENSIONING TERMINAL

1. Grip the cable with cable gripping pliers approximately 3/16" away from the swaged stud and install Receiver over threads of stud about 5 to 6 turns.

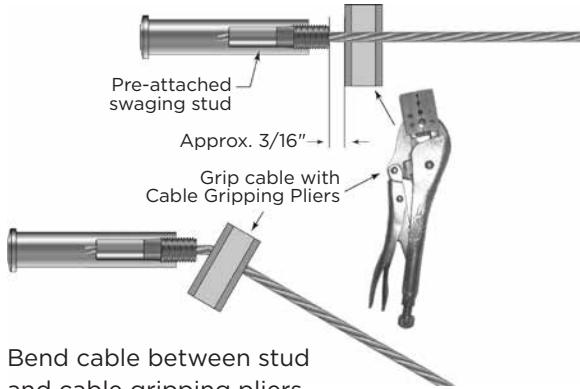


Bend cable between stud and cable gripping pliers approximately 35-45 degrees.

2. Remove stud from Receiver and install Receiver into desired end post (remember to install Delrin® plastic washer). Reinstall stud into Receiver at least 5 full turns.



C. FEED CABLE THROUGH INTERMEDIATE POSTS

1. Feed the bare end of the cable through all your intermediate posts and through the end post where you will be installing the Pull-Lock® fitting.

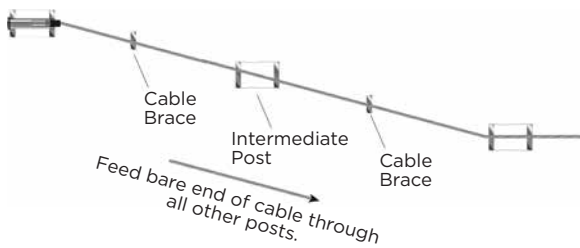

D. FEED/CRIMP CABLE THROUGH CORNER POSTS


As this section deals with passing cables through corners, which you will not be doing with stairs, please proceed to Section E.

E. INSTALL SWAGELESS TERMINAL

1. Slip the Delrin® washer over the body of the Pull-Lock® fitting.



2. Rotate the Pull-Lock® fitting clockwise as you push it onto the cable. If the cable begins to "unravel," you are rotating the fitting in the wrong direction.

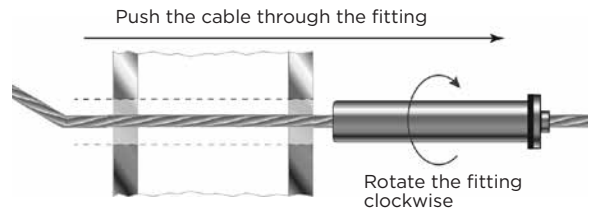


Note: If you have trouble inserting the cable into the fitting, it may be because the locking wedges have become stuck. This is not a defect!

Here's what you can do to "free the wedges"

For Pull-Lock® or Push-Lock® fittings for 1/8" cable, using either a RFXPL-KEY or 1/4" diameter bolt, insert the RFXPL-KEY or bolt into the hole and press until the wedges move freely. Perform the same operation for a 3/16" Pull-Lock® or Push-Lock®, except use a 16d nail or another tool with 1/8" or smaller diameter. Anything larger than what is recommended can actually get stuck inside the fitting - NOT what you want!

3. Push the Pull-Lock® fitting along the cable and firmly into the hole in your post. Pull on the cable (cable gripping pliers are helpful for this) to create as much tension as possible as you seat the Pull-Lock® fitting into the hole.


Make sure that the Receiver and stud on the opposite end are still seated in their pre-drilled hole (if not, seat them and repeat the process). The purpose of this is to make the cable as tight as possible prior to increasing tension on the cable by tensioning the Receiver.

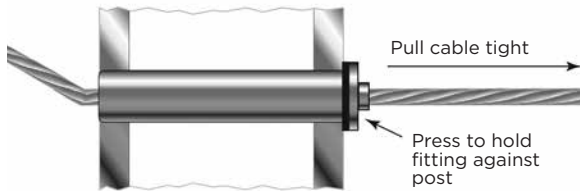


F. TENSION CABLES

1. Move back to the Receiver and stud end of cable and attach cable gripping pliers to the cable as close as is practical to the fittings without contacting the end post.


Rotate the Receiver to create desired tension on the cable (you may have to move the cable gripping pliers several times to avoid contact with the end post).

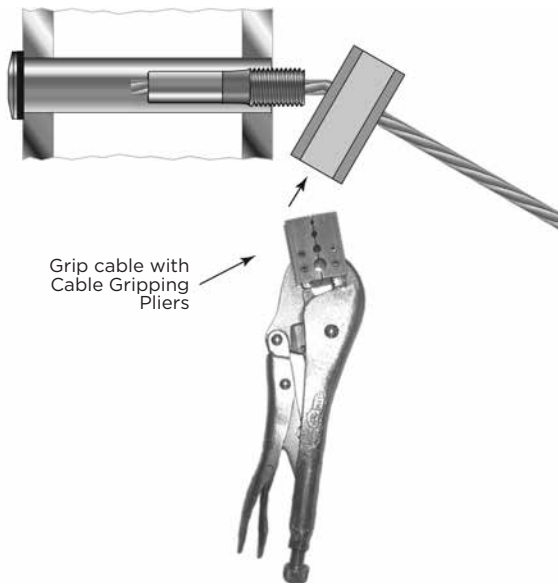

2. Tension all cables in sequence, beginning with the center cables, moving up and down toward the top and bottom. As you tension each cable, give it a sharp pull downward mid-span to help set the wedges, then re-tension as necessary in the same sequence. Be aware that the cable may move as much as 3/16" toward the tensioning terminal as the wedges seat.

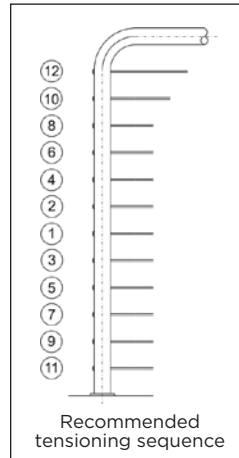


3. Move to Pull-Lock® end of the run. You are going to create a sharp bend in the cable where it exits post by placing a block of wood (for protection of the post) on the cable at the face of the post and striking it with a hammer. This will create the sharp bend you are looking for.

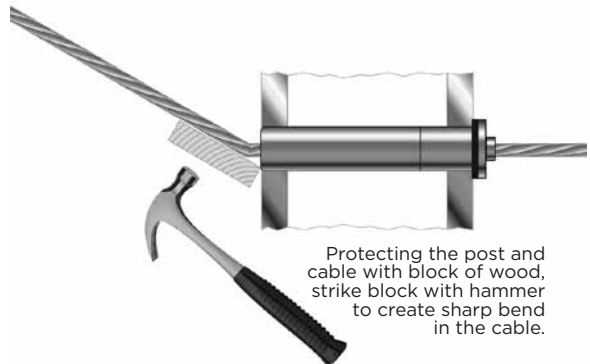

G. TRIM EXCESS CABLE

1. Cut the cable flush with the hole in the back of the fitting using a cut-off wheel.

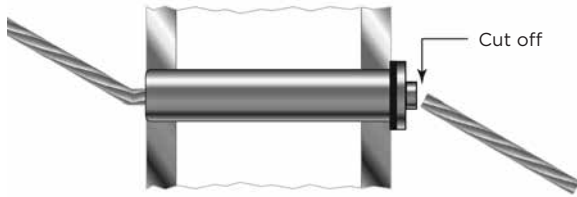

2. Twist the cap onto the lip of the Pull-Lock® fitting.

