





Installation Instructions for Metal Posts Level Runs, Non-Tensioning

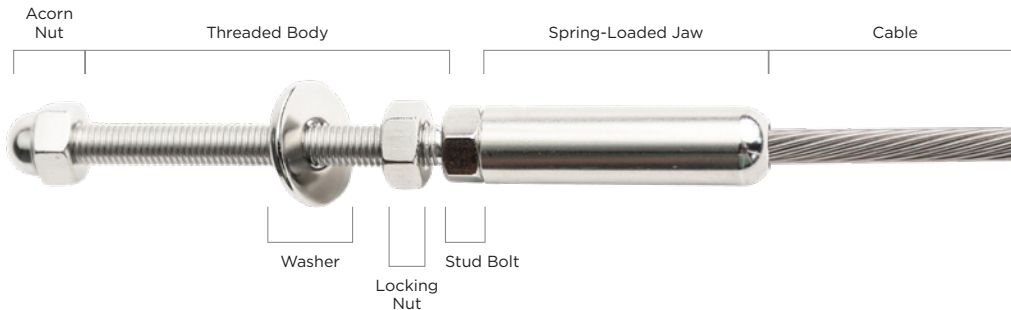

Fitting comes preassembled.

A. Post Preparation

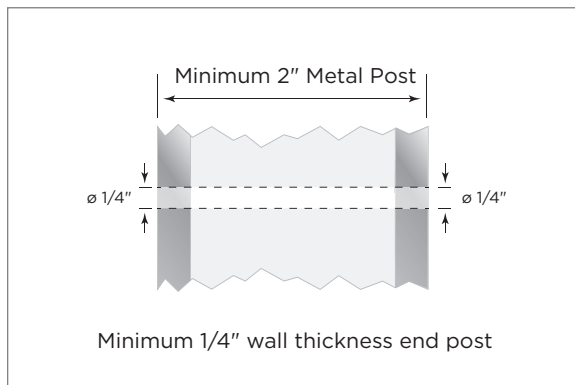

- A1. Using one face of the post, determine the center line of the post that runs from top to bottom.
- A2. Mark the placement of the holes to be drilled along the center line of post. Drill holes should be spaced a maximum of 3" apart from one another starting 3" from the underside of the handrail.
- A3. **End post:** to prepare an end post to accept the Non-tensioner stud, drill holes with a 1/4" drill bit.

Intermediate post: to prepare an intermediate post to accept 1/8" cable, drill holes with a 5/32" drill bit.

NOTE: The maximum hole spacing must be 3" apart to meet Building Code requirements


B. Fastening the Threaded Body

IMPORTANT INSTALLATION NOTE


LEVEL RUNS

The Non-Tensioner fitting should be installed prior to installing the tensioner on the opposing end of cable.

- For metal or wood posts, refer to CR1606 and CR1706 level run instructions, tensioning.

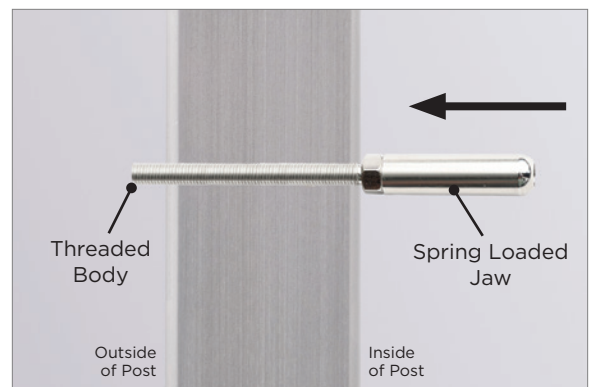


- B1. Holding the Spring-Loaded Jaw, feed the threaded body through the inside to the outside of the post. Make sure the Spring-Loaded Jaw is firmly pressed against the inside of the post.

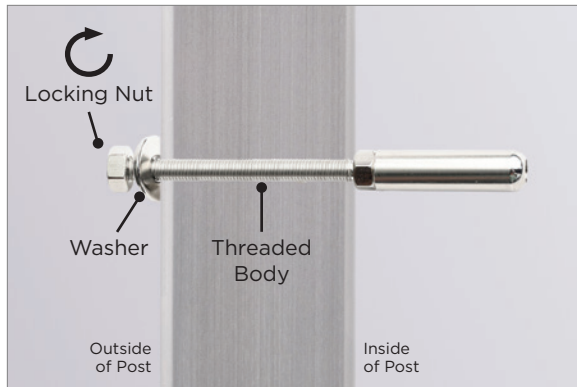


B2. Slide the Washer over the Threaded Body. Screw the Locking Nut in a clockwise direction until it is fully tightened.


C. Fastening the Cable

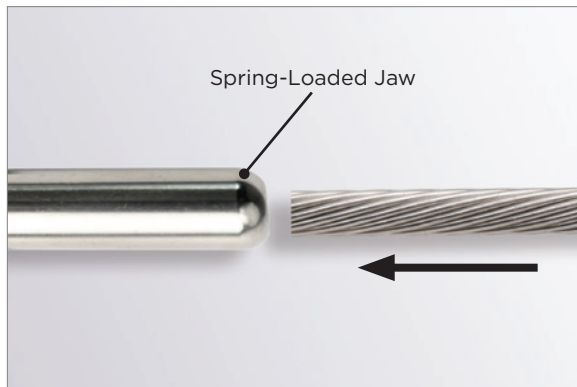

C1. Insert the cable into the Spring-Loaded Jaw.

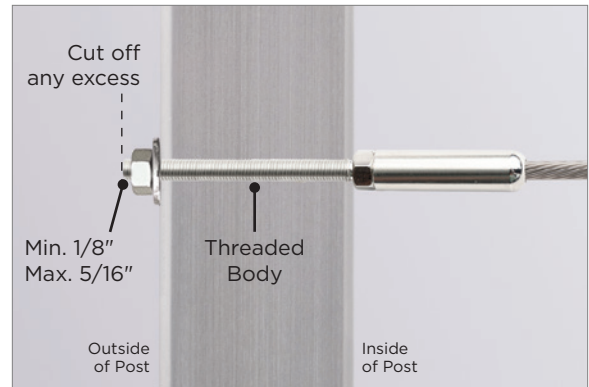

C2. If using a smaller than 2" x 2" post, cut off excess of the exposed Threaded Body leaving a minimum of 1/8" with a maximum exposed length of 5/16" to allow the acorn nut to be affixed. The Threaded Body can be cut to a minimum length of 1/8" with a maximum exposed length of 5/16" to allow the Acorn Nut to be affixed.

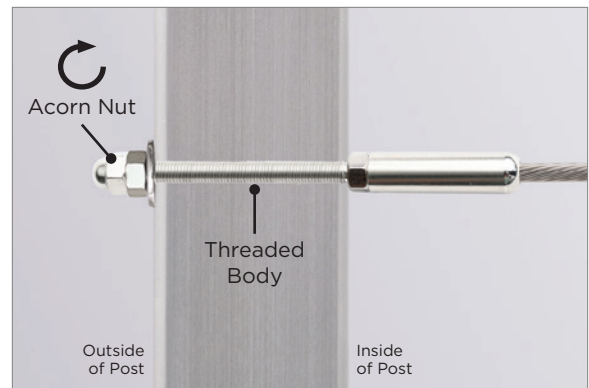

C3. Complete the installation by threading the Acorn Nut in a clockwise direction onto the Threaded Body. The Acorn Nut should sit flush against the Locking Nut.

Limited Warranty

Bezdan warrants to the original property owner/purchaser that Bezdan stainless steel cable and fittings are free of defect for a period of ten (10) years from the date of receipt. This warranty covers defects in workmanship and materials under normal use, conditions, installation and maintenance in accordance with the product specifications and procedures described in the cable rail installation and maintenance instructions. Learn more at geobezdan.com/bezdan-cable.